


# Added Network Access Parameter - Connect With HIKMICRO Viewer Or THG Start


## Connection Steps

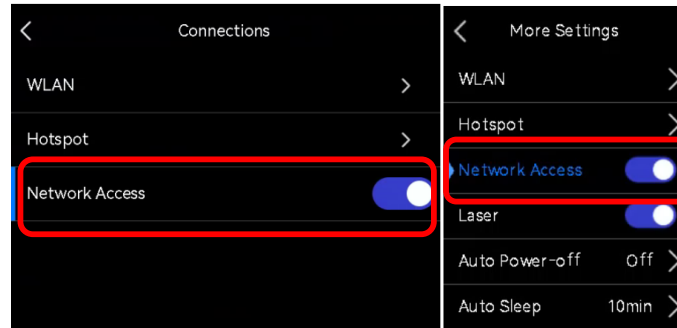


Device Settings->Connection->Network Access  
Or Device Settings->More Settings->Network Access  
**Make sure 'Network Access' is enabled.**



HIKMICRO Viewer scans the QR code to connect.

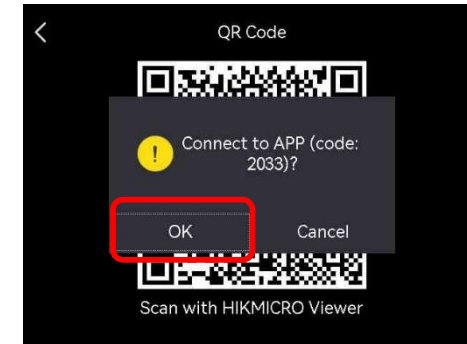

Situation A: Confirm authentication after restoring or establish connection for the first time (Delete the device in the device management interface or connect with a new phone.).

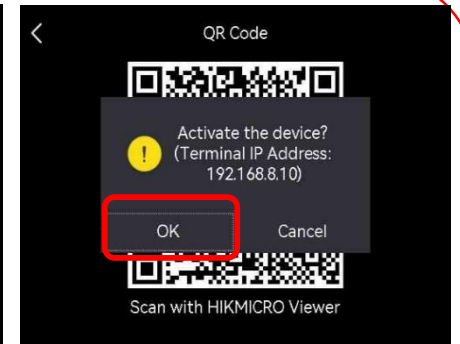



Situation B: Active device after restoring or first establishing connection.

HIKMICRO Viewer and THG Start Version Firmware Version		Connect to Versions Earlier than V2.4.5.	Connect to V2.4.5
EN 18031 (Factory Firmware Version)		Meet situation B	Meet situation A
EN18031 (Upgrade from a previous version)	The imager was connected to the app before the upgrade or activated by other PC clients and has not been restored afterward;	It can be directly connected. 'Network Access' is enabled, and Imager has been activated. There is no pop-up prompt for device activation.	It can be directly connected. 'Network Access' is enabled, and no authorization is required. There is no pop-up prompt for authentication.
	Imager was either connected to the app before the upgrade or activated by other PC clients and restored after the upgrade, or it was never connected to the app before the upgrade.	Meet situation B	Meet situation A
Earlier than EN 18031		It can be directly connected. Network access is enabled by default. There is no pop-up prompt to activate the device.	It can be directly connected. Network access is enabled by default. There is no pop-up prompt for authentication.


# Added Screen Lock

## Set Password

Enter Device Settings->Screen Lock or Device Settings->More->Screen Lock, enable Screen Lock, and then set a password.

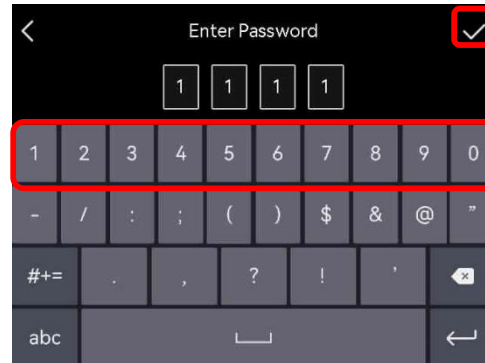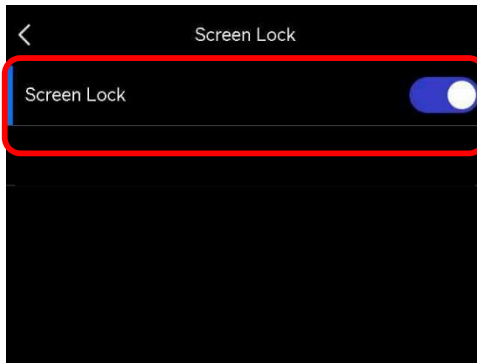


Numbers  
Only

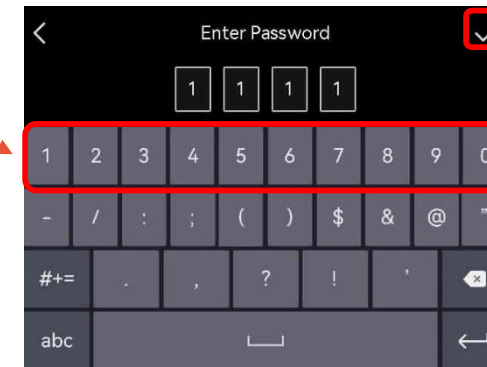

## Change Password


When screen lock is enabled, you can change the password if you don't like the current one.

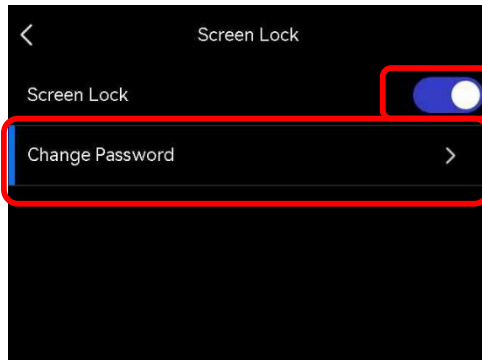

Numbers  
Only

## Log in

Enter the 4-digit password every time the device starts up or wakes from sleep mode.

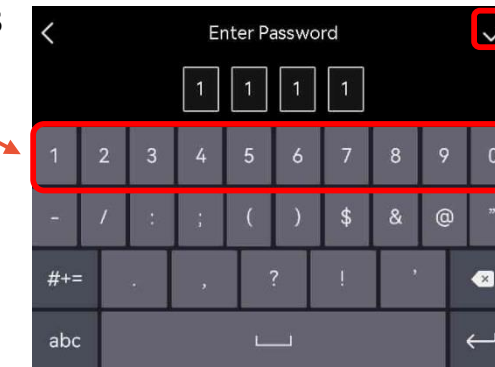

## Reset Password

If the password is forgotten, it can be reset.

**Note: This operation will reset the device to factory settings and erase all data (Images and Videos).** For devices with an SD card, it is recommended to remove the SD card before performing the above operation.

